


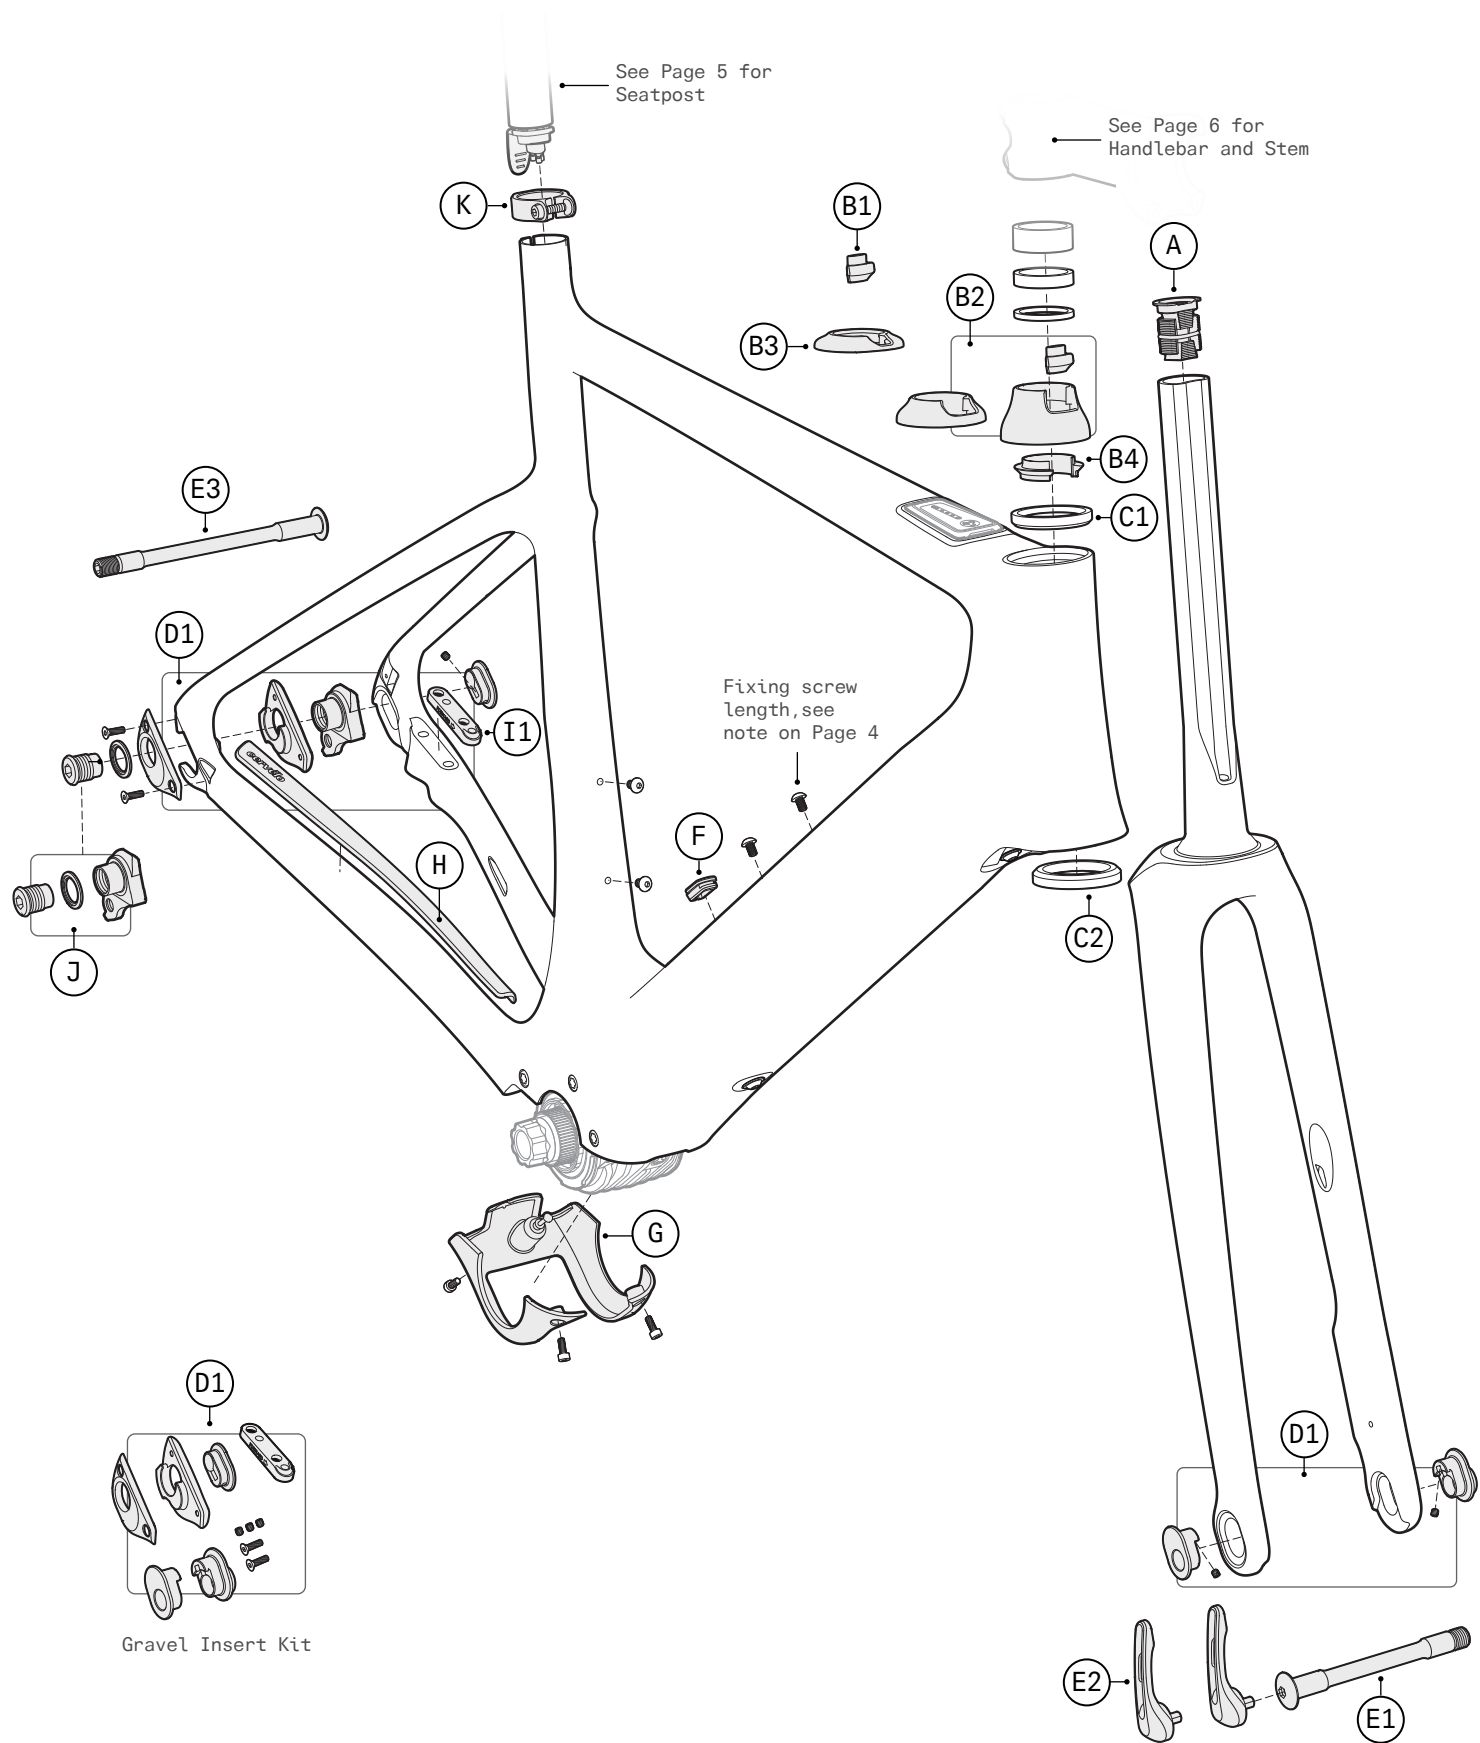

A. FRAME SPECIFICATIONS

Item	Description
Upper Headset Bearing	1-1/4", 34 x 46.8 x 7, 45°x45°
Lower Headset Bearing	1-1/2", 40 x 51.8 x 7.5, 36°x45°
Rear Derailleur Hanger	SRAM UDH
Rear Thru-Axle Dimensions	169mm Length, M12 x 1, for UDH derailleur hanger, 142 x 12 spacing
Front Thru-Axle Dimensions	127mm Length, M12 x 1.5, for 100 x 12 spacing
Maximum Chainring Size 1x	46T
Maximum Tire Width (Actual)	Gravel: 43.5 mm with 7.5 mm clearance*
	Road: 34 mm with 6 mm clearance**
Front Brake Mount Type	Flat mount fork
Rear Brake Mount Type	Flat mount
Rear Brake - Chainstay Height	30 mm
Brake Rotor Min/Max	160 mm/160 mm
Bottom Bracket Type/Width	Fazua - Ride 60 Drive Unit is compatible with ETOR Drive standard cranksets
Fork Offset Size SM	Gravel configuration 57 mm / Road configuration 53 mm
Fork Offset Size MD / LG / XL	Gravel configuration 54 mm / Road configuration 50 mm
Fork Steerer Type	Cervélo D-Shaped


* Tire measurements shall be taken at the widest point of the tire when it is installed on the rim and inflated. 7.5 mm of distance is required between the tire and any frame or fork element.

** Tire measurements shall be taken at the widest point of the tire when it is installed on the rim and inflated. 6 mm of distance is required between the tire and any frame or fork element.

B. PART NUMBERS - GRAVEL CONFIGURATION - CERVÉLO

Item	Part No.	Description	Qty.	Consumable
A	FKI-CL005-517A	D-Steerer Preload Compression Plug	1	
B1	PL-601	Bearing Cover Plug	1	X
B2	BC-STA	STA Headset Bearing Cap Kit (30mm & 14mm)	1	
B3	BC-STA-644	STA Low Bearing Cover Kit (8mm) Compatible with hydraulic brake systems and electronic shifting systems ONLY	1	
B4	SR-STA	STA Headset Split Ring	1	
C1	HS-082	FSA Headset Bearing (Upper) 1-1/4 45° X 45°	1	X
C2	HS-110	FSA Headset Bearing (Lower) 1-1/2 36° x 45°	1	X
D1	QRI-712	ERA Gravel Dropout Insert Kit	1	
E1	QRA-AERO2-F	Cervélo Front Aero Thru-Axle with Removable Handle	1	
E2	QRA-AERO2-HNDL	Removable Handle for Cervélo Aero Thru-Axle	1	
E3	QRA-698	Cervélo Road UDH Rear Aero Thru-Axle with Removable Handle	1	
F	PL-720	ERA Down Tube Plug	1	
G	CVR- 718	ERA Drive Unit Cover	1	
H	PRO-CS-ASP	FM137 CS Protector	1	X
I1	BRP-707*	ERA Gravel Frame Brake Plate	1	
J	00.7918.089.000	SRAM UDH Rear Derailleur Hanger Assembly	1	X
K	SPC-SQ-R-2011-A	Seatpost Clamp	1	

* Brake plates are available separately as well as included in Insert Kits

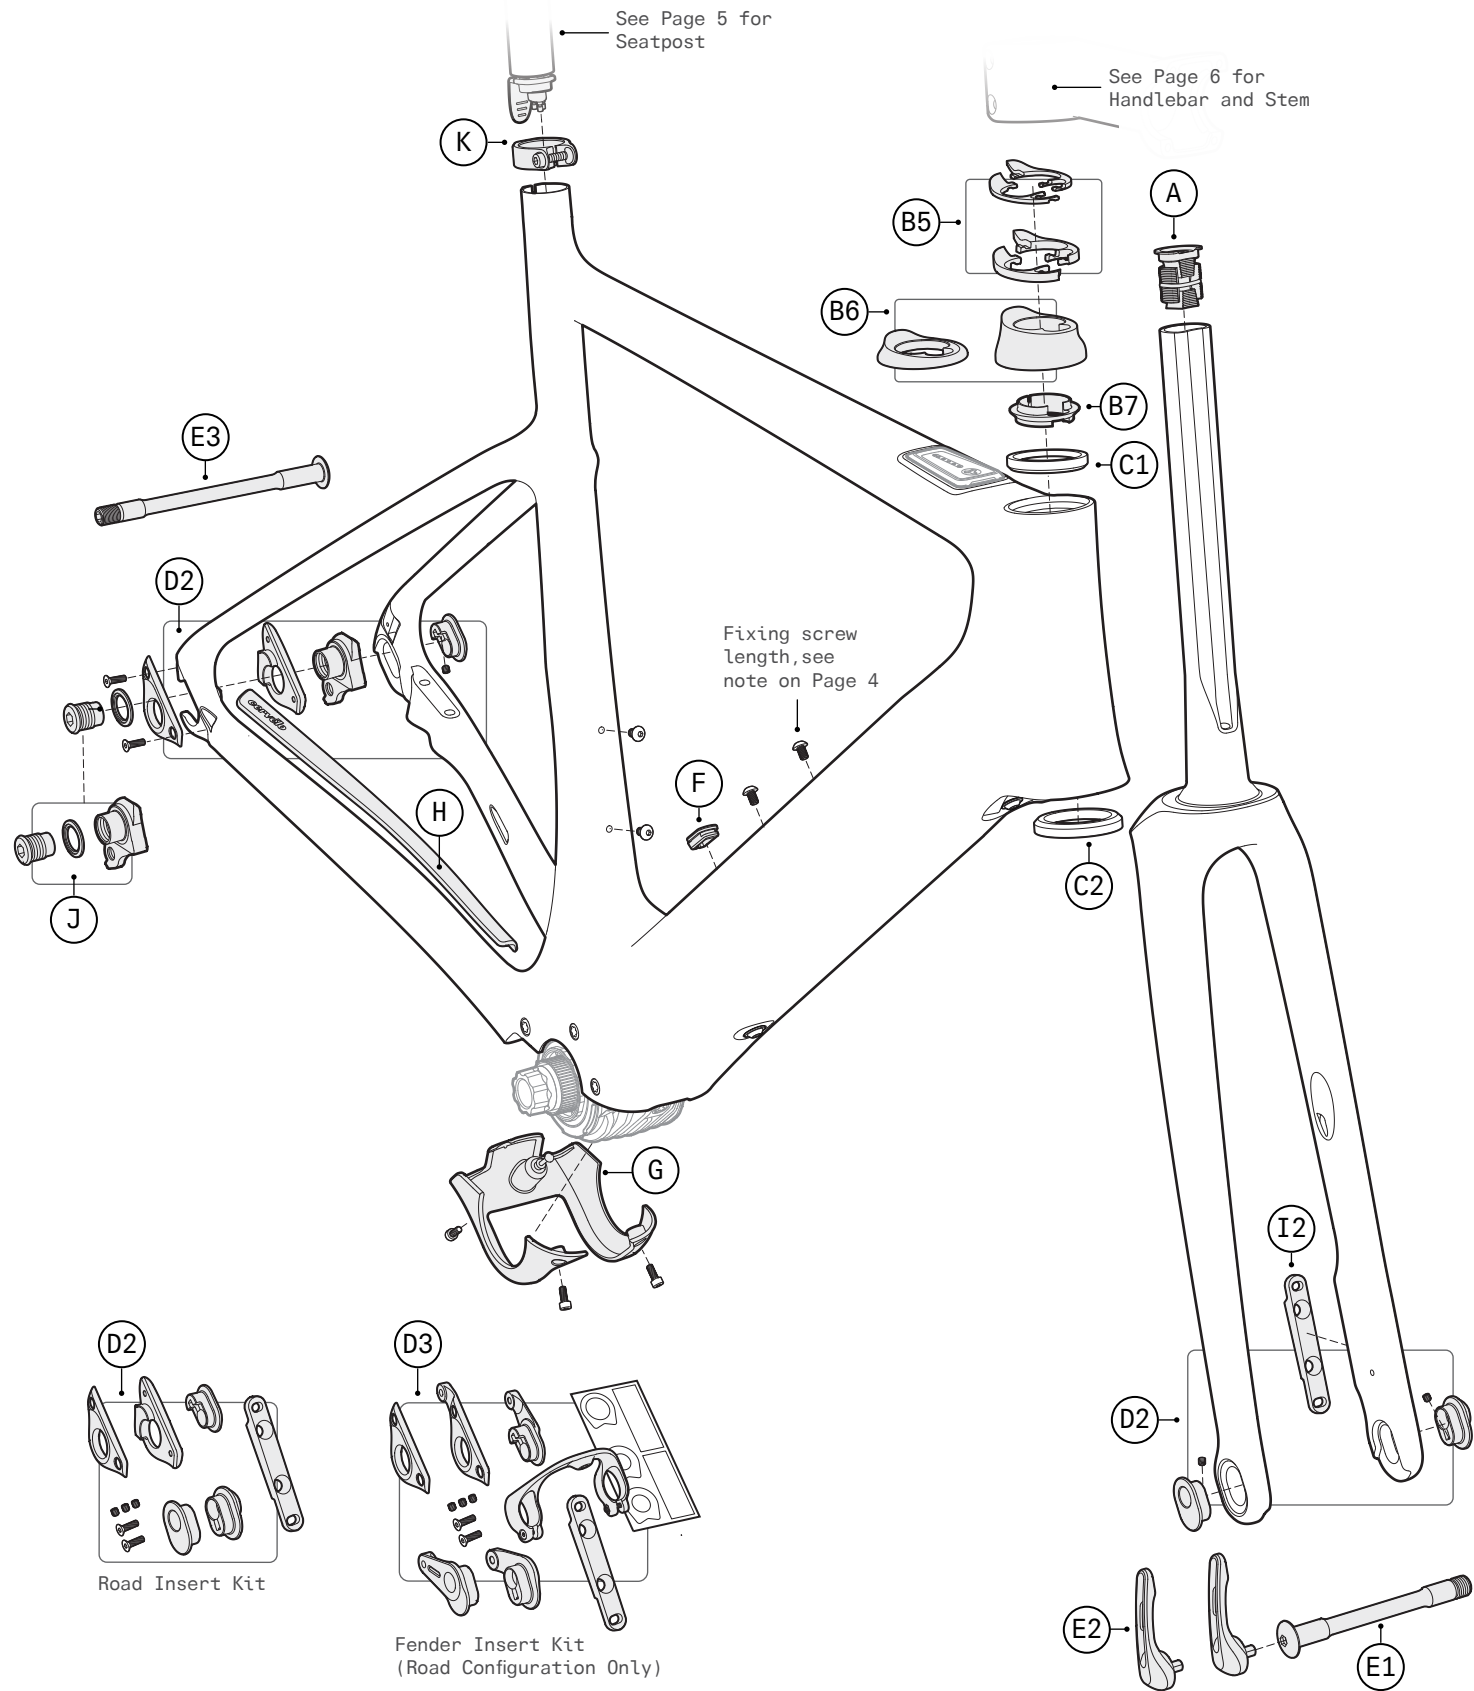


C. PART NUMBERS - ROAD CONFIGURATION - CERVÉLO

Item	Part No.	Description	Qty.	Consumable
A	FKI-CL005-517A	D-Steerer Preload Compression Plug	1	
B5	SK-032	Stem Spacer Kit	1	
B6	BC-ST32	Bearing Top Cap Kit (22 mm & 7 mm)	1	
B7	SR-312	Headset Split Ring	1	
C1	HS-082	FSA Headset Bearing (Upper) 1-1/4 45° X 45°	1	X
C2	HS-110	FSA Headset Bearing (Lower) 1-1/2 36° x 45°	1	X
D2	QRI-717	ERA Road Dropout Insert Kit	1	
D3	MTA-751	ERA Road Fender Mount Kit	1	
E1	QRA-AERO2-F	Cervelo Front Aero Thru-Axle with Removable Handle	1	
E2	QRA-AERO2-HNDL	Removable Handle for Cervelo Aero Thru-Axle	1	
E3	QRA-698	Cervelo Road UDH Rear Aero Thru-Axle with Removable Handle	1	
F	PL-720	ERA Down Tube Plug	1	
G	CVR- 718	ERA Drive Unit Cover	1	
H	PRO-CS-ASP	FM137 CS Protector	1	X
I2	BRP-706*	ERA Road Frame Brake Plate	1	
J	00.7918.089.000	SRAM UDH Rear Derailleur Hanger Assembly	1	X
K	SPC-SQ-R-2011-A	Seatpost Clamp	1	

* Brake plates are available separately as well as included in Insert Kits



Down Tube Fixing Screw Length

Incorrect screw length could cause a short circuit of the electrical system or damage the battery which can lead to overheating. A battery that is severely damaged can catch fire. Ensure use of the correct length fixing screws.

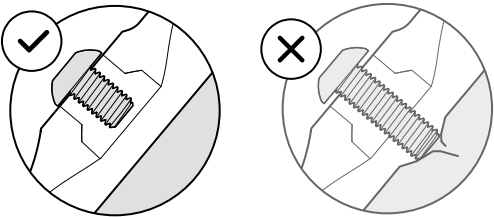

D. PART NUMBERS - SEATPOSTS, HANDLEBARS, STEMS

Item	Part No.	Description	Qty.
All Models			
L1	MT-LM-R-003	Accessory Mount Kit - Rear	1
L2	MT-LM-F-004	Accessory Mount Kit - Front	1
M1	SP-SP19-25MM-WH	SP19 Seatpost with Head 25mm	1
M2	SP-SP19-15MM	SP19 Seatpost with Head 15mm	1
M3	SP-SP19-ZERO-WH	SP19 Seatpost with Head 0mm	1
N	MT-BINT-SP2	Seatpost Battery Mount	1
Gravel			
O	See Table E	AB09F Carbon Handlebar	1
P1	See Table F	ST36 Alloy Stem	1
P2	MT-597	ST36 Cable Guide	1
Road			
Q	See Table G	HB13 Carbon Handlebar	1
R1	PL-338	Rubber Plug for ST32 Top Cap	1
R2	STC-305	ST32 Stem Top Cap	1
R3	See Table H1	ST31 Carbon Stem	1
R4	See Table H2	ST32 Alloy Stem	1

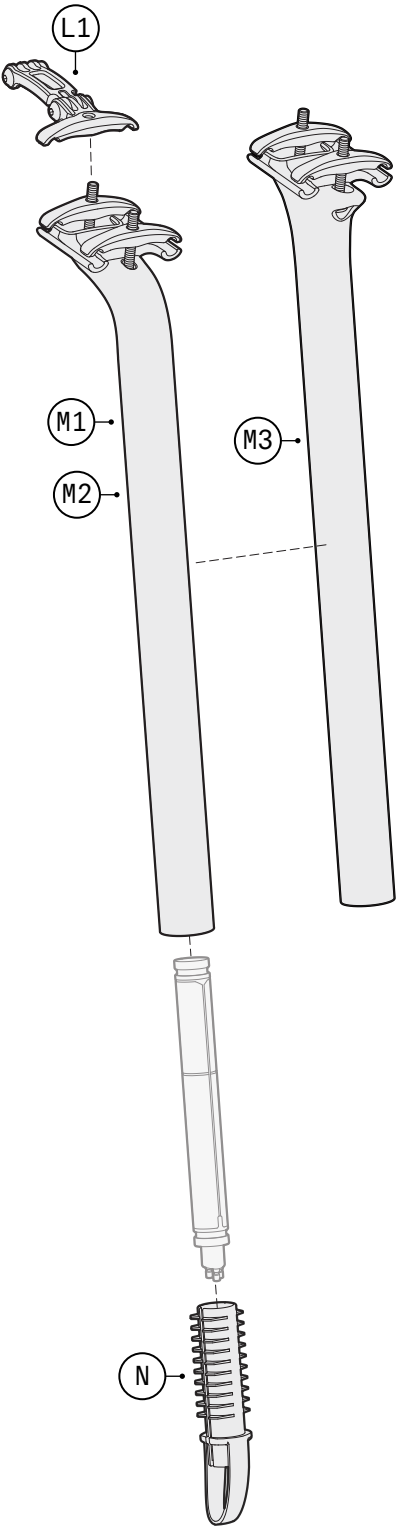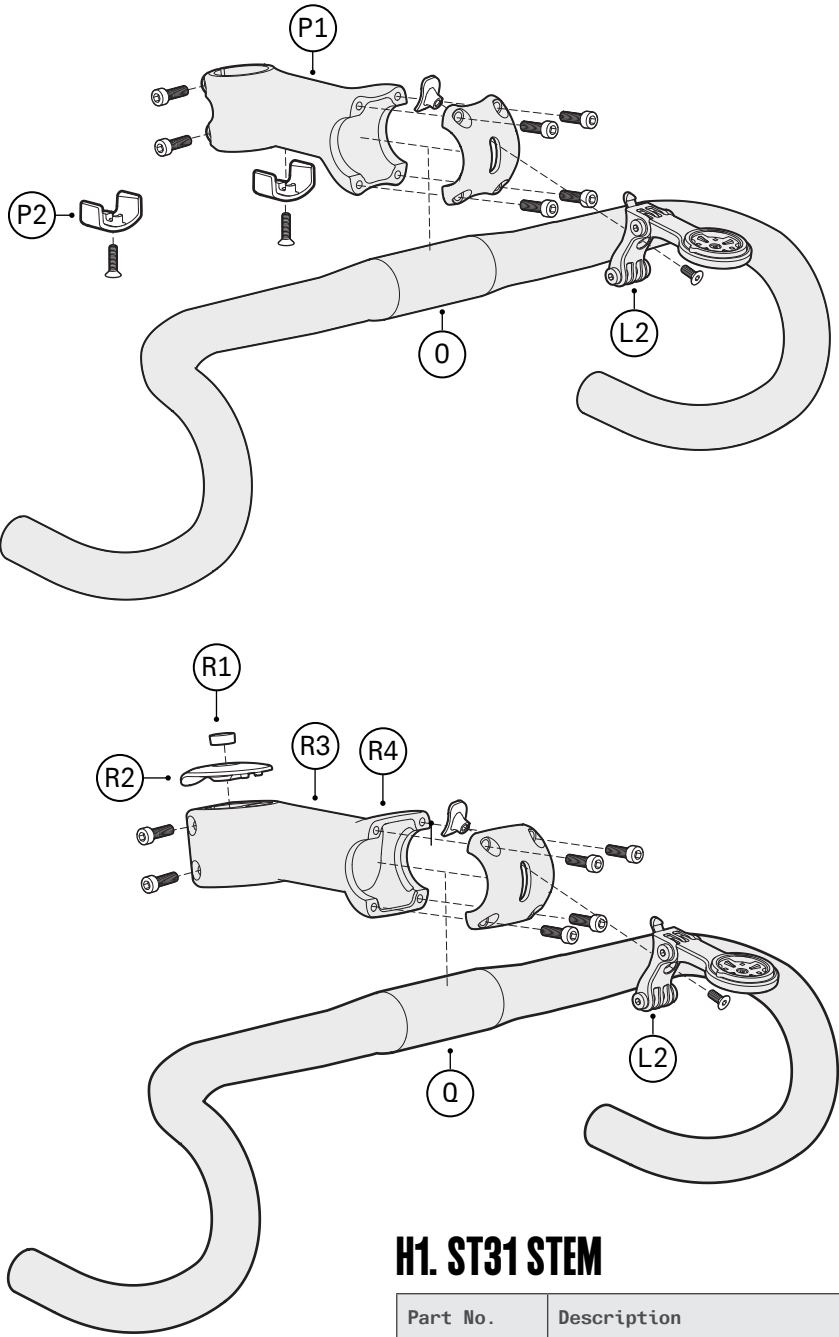

H1. ST31 STEM

Part No.	Description
ST-C031-80	ST31 Carbon Stem 80mm
ST-C031-90	ST31 Carbon Stem 90mm
ST-C031-100	ST31 Carbon Stem 100mm
ST-C031-110	ST31 Carbon Stem 110mm
ST-C031-120	ST31 Carbon Stem 120mm
ST-C031-130	ST31 Carbon Stem 130mm

E. AB09F* HANDLEBAR

Part No.	Description
HB-AB09-FLA-38	AB09F Carbon Handlebar 38cm
HB-AB09-FLA-40	AB09F Carbon Handlebar 40cm
HB-AB09-FLA-42	AB09F Carbon Handlebar 42cm
HB-AB09-FLA-44	AB09F Carbon Handlebar 44cm

*AB09F has 16 degree flare at drop

F. ST36 STEM

Part No.	Description
ST-A036-70	ST36 Alloy Stem 70mm
ST-A036-80	ST36 Alloy Stem 80mm
ST-A036-90	ST36 Alloy Stem 90mm
ST-A036-100	ST36 Alloy Stem 100mm
ST-A036-110	ST36 Alloy Stem 110mm
ST-A036-120	ST36 Alloy Stem 120mm
ST-A036-130	ST36 Alloy Stem 130mm

G. HB13 HANDLEBAR


Part No.	Description
HB-HB13-38	HB13 Carbon Handlebar 38cm
HB-HB13-40	HB13 Carbon Handlebar 40cm
HB-HB13-42	HB13 Carbon Handlebar 42cm
HB-HB13-44	HB13 Carbon Handlebar 44cm

H2. ST32 STEM

Part No.	Description
ST-A032-70	ST32 Alloy Stem 70mm
ST-A032-80	ST32 Alloy Stem 80mm
ST-A032-90	ST32 Alloy Stem 90mm
ST-A032-100	ST32 Alloy Stem 100mm
ST-A032-110	ST32 Alloy Stem 110mm
ST-A032-120	ST32 Alloy Stem 120mm
ST-A032-130	ST32 Alloy Stem 130mm

11. PART NUMBERS - RIDE 60 - CERVÉLO

Item	Part No.	Description	Qty.	Consumable
S	MT-719	ERA Speed Sensor Cover with Fixing Screw	1	
T	BT-506	ERA Charge Port Fixing Screws	4	
U	PRO-817	ERA Battery Isolator Foam	1	
V	BT-012	ERA Battery Mount Fixing Screw	1	
X1	CSP-197	107 Asym BCD 4 Bolt 47.5mm Chainline for SRAM Chainring Fazua Ride 60	1	
X2	CSP-195	104 BCD 4 Bolt 50mm Chainline for Fazua Ride 60	1	

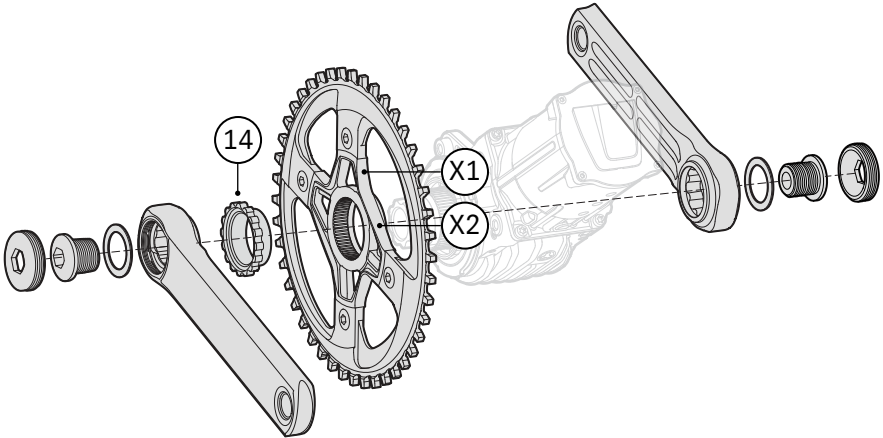

The Fazua Ride 60 Drive Unit is compatible with ETOR Drive cranksets.

Maximum size chainring: 46t


Crankarms are drive (right) and non-drive (left) side specific.

12. PART NUMBERS - RIDE 60 - FAZUA

Item	Part No.	Description	Qty.	Consumable
1	AS-31A102100A	Road Control-Left Hand	1	
2	AS-31A102000A	Road Control-Right Hand	1	
3	AS-30A102200A	Fazua Ride 60 LED Hub	1	
4	AS-60A122000A	Road Control Splitter	1	
5	AS-62A104100A	Ride 60 Power Unit Mounts with Fixing Screws	2	
6	AS-60A120000A*	Ride 60 Power Unit Mount Fixing Screw	1	
7	AS-20A103001A	Fazua Ride 60 Energy 430 Power Unit (Battery)	1	
8	AS-10A101100A	Ride 60 Drive Unit WB (Motor)	1	
9	AS-60A114000A**	Ride 60 Drive Unit Fixing Screw	1	X
10	AS-61A101100A	Fazua Ride 60 Speed Sensor Cable	1	
11	AS-61A104200A	Ride 60 Thru-Axle Magnet	1	
12	AS-61A102000A	Ride 60 Charge Port S (no Charge Cap)	1	
13	AS-61A105000A	Ride 60 Charge Cap	1	
14	AS-60A115000A	Ride 60 Crankset Spider Lockring	1	

* Power Unit Mount Fixing Screws are available separately as well as included in with the Power Unit Mount.

** Drive Unit Fixing Screws are sold individually. 6 are required and must be replaced each time the Drive Unit is removed and reinstalled.

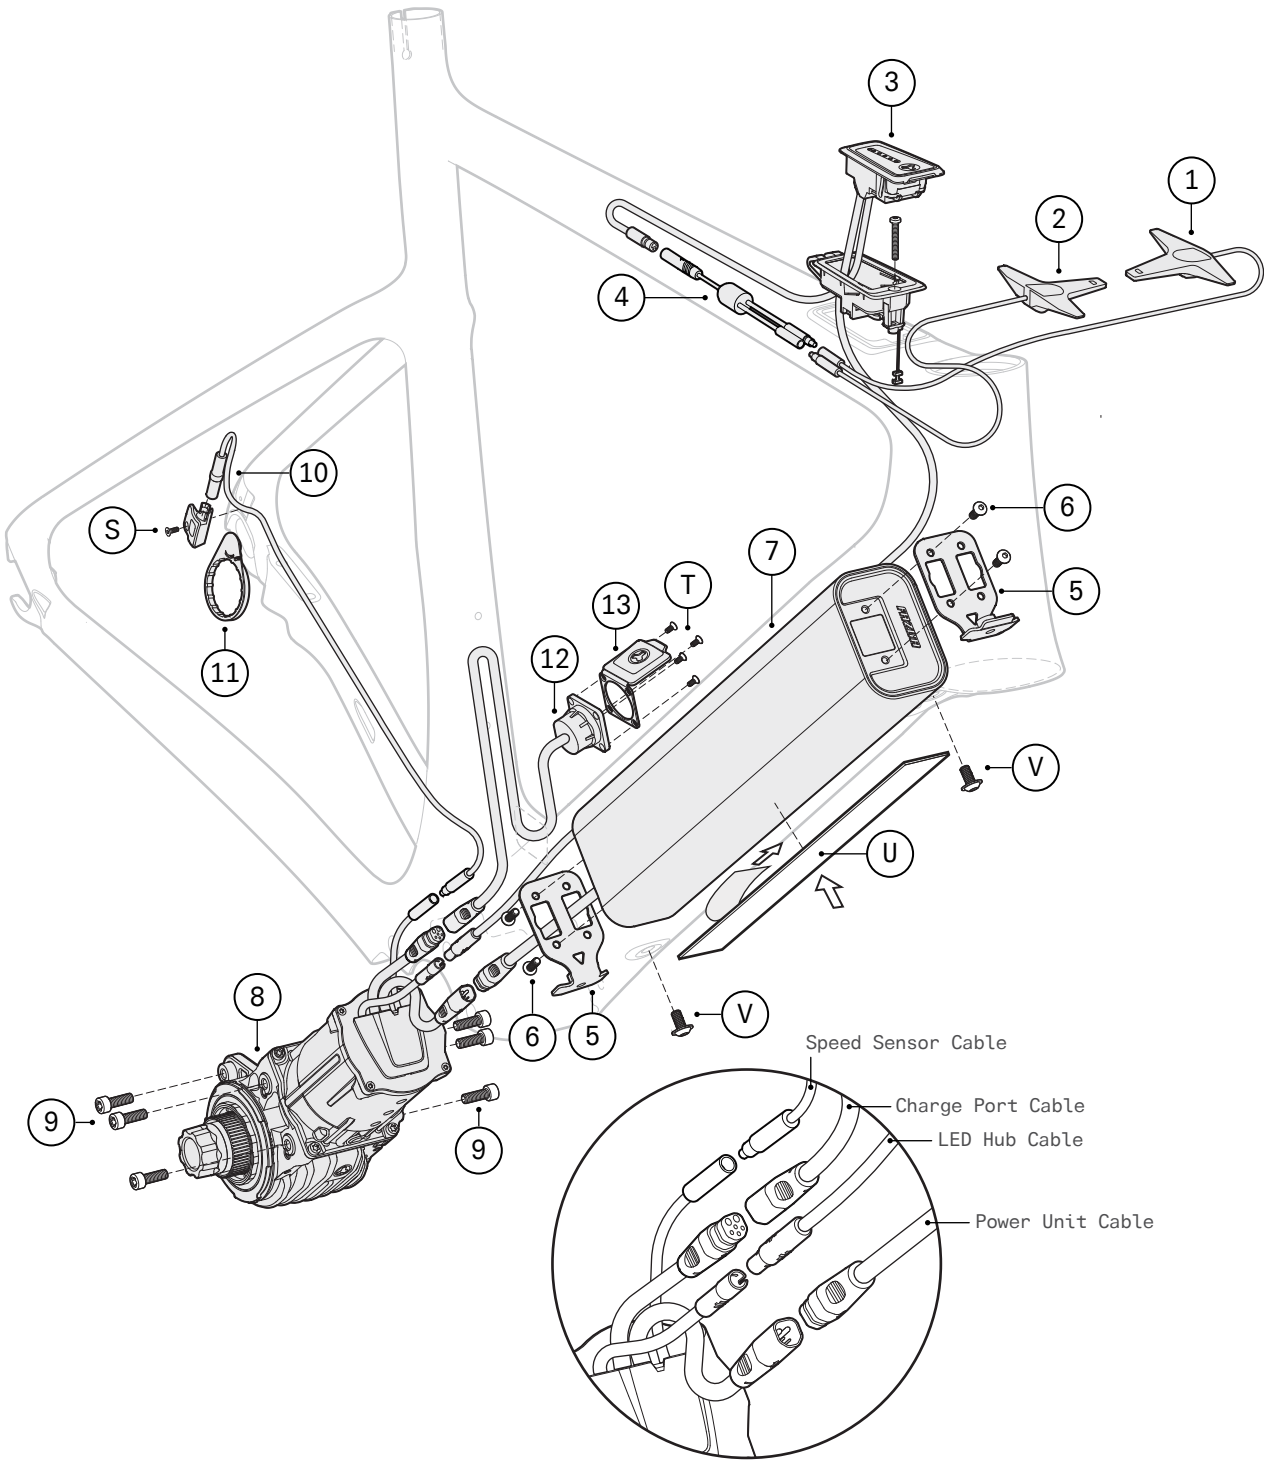

J. SUGGESTED PREVENTATIVE MAINTENANCE SCHEDULE

Item	Every Ride	300 Miles	600 Miles	900 Miles	1200 Miles (Yearly)
Check bicycle for visual damage and function of all controls	X				
Check for firmware updates to electronics			X		X
Check electronic shifting system battery level and recharge if low		X	X	X	X
Check brake function	X				
Check brake pad and rotor thickness, replace at manufacturer's recommended wear point			X	X	X
Bleed hydraulic brake system					X
Remove drivetrain, clean, degrease, reinstall with appropriate grease and lubricant					X
Inspect chain, cassette, chainring, and derailleur pulley wheels for wear. Replace as per manufacturer's specification		X	X	X	X
Remove bottom bracket, inspect for wear, clean threads, and reinstall with proper grease and lubricant					X
Visual external inspection of mechanical shift housing and brake hose for wear, frayed, or cracked pieces	X				
Full inspection of mechanical shift cable and housing for normal wear and tear. Replace entire cable system when exhibiting signs of exploded housing ends, bent or frayed shift cables			X		X
Service headset- remove bearings, inspect for wear, replace bearings if worn, clean interface, and reinstall with appropriate grease					X
Clean and reapply grease/carbon paste/thread locker to stem, seatpost, and seatpost wedge hardware as per manufacturer's recommendation					X
Inspect spoke tension and wheel true- adjust as needed			X		X
Inspect wheel and freehub bearings and adjust/replace as needed			X		X
Check tire sealant level and replace if dry		X	X	X	X
Inspect tire casing and tread condition and replace when worn			X		X

RECOMMENDATIONS

1. It is Cervélo's strong recommendation to batch overlapping services together in a comprehensive way (e.g. service/replace headset bearings at time of brake bleeds, etc.)
2. In case of a conflict between the service intervals given in this tech reference sheet and those provided by a component manufacturer, consult with your Cervélo Retailer, Cervélo Customer Service, or the original component manufacturer for clarification.